

MITEL

NuPoint Messenger IP

ACCESSING YOUR MAILBOX FROM OUTSIDE THE COMPANY

- Enter the NuPoint Messenger™ system access number **74747**
- Enter your mailbox number followed by the ***** key.
- Enter your passcode.

You're now at the main menu (shown below) and are ready to begin messaging!

